

## How to read this manual

This manual uses illustrations way to illustrate the steps and precautions Photos of this manual is only for reference, please prevail in kind.

## Tag

**Important** Precautions mark, should be read carefully in order to prevent the occurrence of life, injury and other accidents.

Special instructions, supplementary explanation, the Prophet and the reference mark.

Additional information tags, assist the machine operator.

**Tips:** When the instructions say and physical description of the function is not the same, the actual functionality prevail.


## Warning

To ensure that you and your car and personal safety of others, please be sure to do the following basic requirements:


1. Before using this unit, please read all instructions carefully. Follow the instructions as if caused by the machine along the sea, it will void the warranty.
2. to ensure traffic safety and to avoid violation of traffic regulations, do not watch the program and operate the unit while driving.
3. To avoid short circuit, do not allow the unit in contact with rainwater.
4. To prevent a short circuit, do not prevent or leave any metallic objects (such as coins or metal tools) inside the device.
5. Click here for manual use the machine, the machine can not open their own repairs, for repair, please professional repair station maintenance.
6. when the engine is turned off, do not use the car stereo for a long time, otherwise it will run out of battery power.
7. Never insert objects into the ventilation slots or other openings of the device.
8. Do not use sharp objects come into contact, rub or strike the screen.

## Enable/disable host


### 1. Power






When the ignition switch is in the ACC ON position, press the switch panel on the touchscreen [  ] key to boot.

### 2. Off

After the host starts, press the switch on the side of the touch screen [  ] button for 2 seconds, the host will perform the shutdown.

## Main interface

In the boot mode, the system defaults to enter the radio interface, touch [  ] icon to enter the main interface, The homepage image is shown in Figure 1.

The side shortcut function bar in the interface includes: navigation [  ], Bluetooth phone [  ], APP page [  ], and settings [  ] function icons. Click the corresponding icon to enter the corresponding function. Click the [  ] icon to set the interface layout and dark and light themes. The page layout diagram is shown in Figure 2;

Time plugin: Click on the time plugin to set time related settings on your own;

Media plugin: Media plugins include radio, USB music, and Bluetooth music. Click the icon in the upper right corner to switch between media playback content, and click the animation inside the media plugin to enter the corresponding media interface;

Quick function bar: Click to enter the corresponding function, and long press the icon in this bar to add and delete the corresponding function;



window function: Click the [  ] icon to select the corresponding function to display in the embedded window; Click on the icon [  ] to display the corresponding functions in full screen. The image displayed in the embedded window is shown in Figure 3.



Figure 1

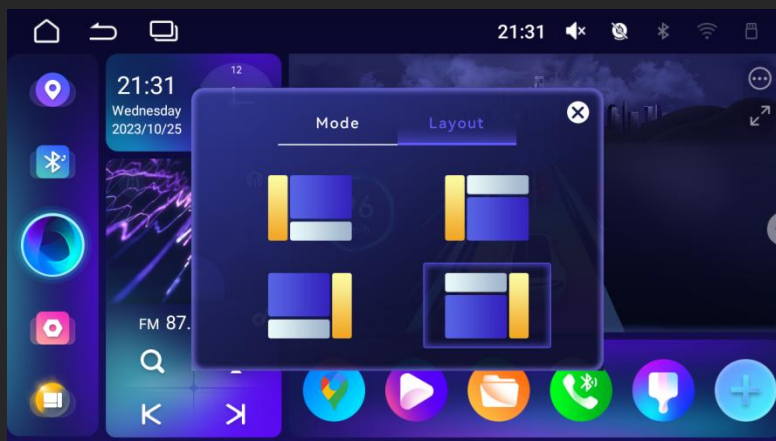 


Figure 2

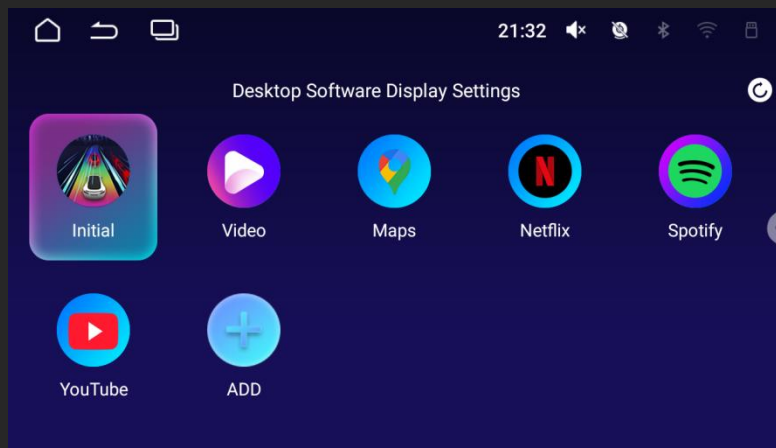 


Figure 3

1. fingeras gently sliding around the screen to switch the main community page, press and hold an icon to move the icon position.
2. In other function interface, touch interface [↶] icon directly return to the previous screen.
3. In other function interface, touch interface [🏠] icon directly return to the main screen.
4. daemon icon, touch [📄] icon to see recently opened and run in the background.
5. in the main interface touch [🗄️] icon to enter [all applications] interface.
6. press the icon [👕] to change Themes.
7. with your finger in the upper right area of the main interface to decline, can quickly open the Settings Feedback cleanup WLAN Closed luminance sound function setting interface.
8. in the main interface touch [🌙] icon, you can turn off the screen, touch to open freely.

## Video Function Operation

This function can play USB, built-in hard disk connected to the device video file.

1. Product Support video file formats including MPEG, MPG, MP4,3GP, MKV, AVI, FLV and so on.
2. in the [main interface] touch [video] icon to enter the following interface:

as shown below:

 
During video playback, slide up and down the left hand area to adjust screen brightness, adjust the volume to the right area.



3. Does not support video playback, because the format is not supported and can not be played. If you want to watch the video when you enter the homepage or other pages, you can touch [📄] to enter the following display state.



4.Touch [ ≡ ] to enter the video list page, you can click to watch the video you want. As shown below:

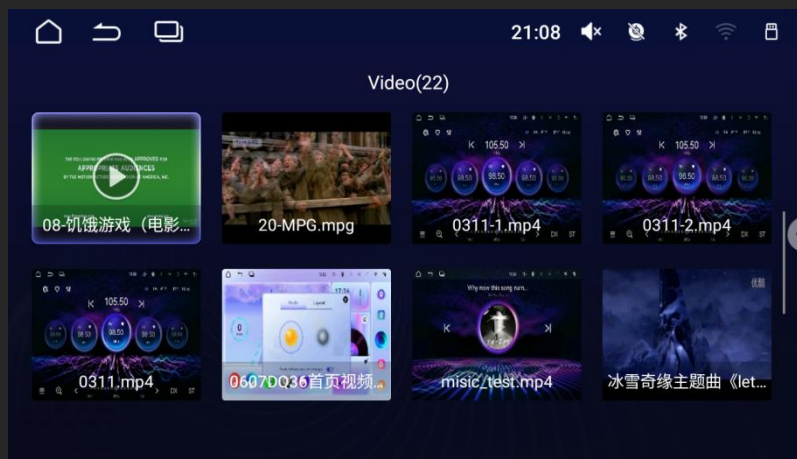

## DSP Setting

In [all applications] interface touch [ DSP ] icon to enter the dsp setting interface.

The DSP Setting contains EQ, listening position,output and frequency division; the GUI is as following;

In order to prevent the speaker equipment from being damaged, DSP related settings are best carried out under the guidance of professionals.

### 1.EQ

You can adjust EQ,Q value, cnter frerquency The EQ GUI and user mode saving;

- ◇Touch [left arrow] or [righ arrow] to select EQ type, As shown in Figure 1
- ◇Touch [U1,U2,U3 button] to select EQ type of the user mode,and long touch [U1,U2,U3 button] to save current adjustment.
- ◇Drag the gain bar into user defined mode
- ◇Touch FC per band EQ to adjust frequency, As shown in Figure 2
- ◇Touch Q button per band to adjust Q value, As shown in Figure 3.

Figure 1:



Figure 2:



Figure 3:

 


### 3. Listening position

This part contains two Listening positioning mode, for example auto and manual mode;

◇ Touch [ms] or [cm] to select mode for making adjustments.

Each time you touch the onscreen button and correction mode changes. Listening position changes as you drag the reference center position.

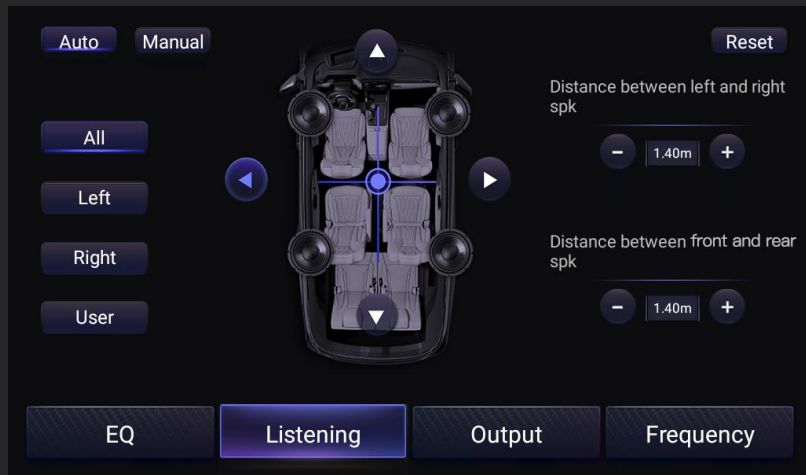

◇ Touch **[+]** or **[-]** for each speaker to adjust the time and distance in manual mode.



### 3. Volume Output adjust GUI

- ◇ Drag the gain bar for each speaker to adjust the gain value.
- ◇ Touch **[Invert]** for each speaker to phase invert or not invert.
- ◇ Touch **[Mute]** for each speaker to mute or not mute.



 
### 4. Frequency division

Frequency division supports 5.1, two frequency division and three frequency division for RCA speaker lines. The function of the reset button is used to reset parameters for Adjusted parameters disorder

- ◇ Touch **[Low pass]** **[slope]** to select HPF FC and slope; At present, slope supports 0dB/oct, 12dB/oct, 24dB/oct, 36dB/oct and 48dB/oct.

◇ Touch [low pass] [slope] to select LPF FC and slope; At present, slope supports 0dB/oct, 12dB/oct, 24dB/oct, 36dB/oct and 48dB/oct.

When setting the tweeter, the center frequency cannot be set too low, otherwise the tweeter equipment may be damaged

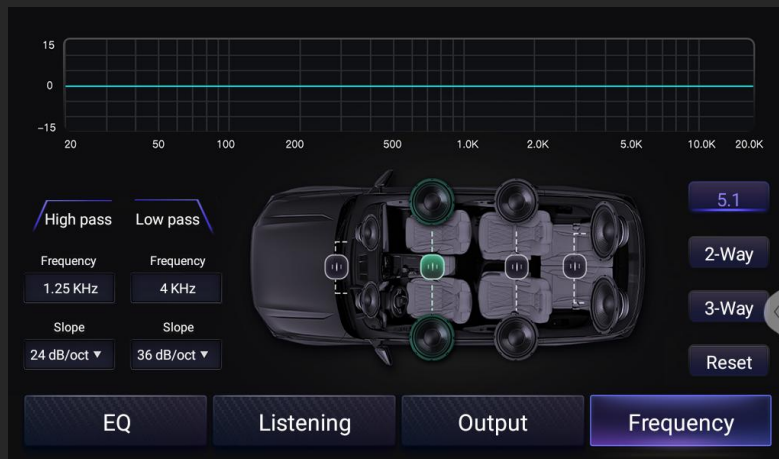

## Warning

To ensure that you and your car and personal safety of others, please be sure to do the following basic requirements: speaker lines. The function of the reset button is used to reset para

1. Before using this unit, please read all instructions carefully. Follow the instructions as if caused by the machine along the sea, it will void the warranty.
2. To ensure traffic safety and to avoid violation of traffic regulations, do not watch the program and operate the unit while driving.
3. To avoid short circuit, do not allow the unit in contact with rainwater.
4. To prevent a short circuit, do not prevent or leave any metallic objects (such as coins or metal tools) inside the device.
5. Click here for manual use the machine, the machine can not open their own repairs, for repair, please professional repair station maintenance.
6. When the engine is turned off, do not use the car stereo for a long time, otherwise it will run out of battery power.
7. Never insert objects into the ventilation slots or other openings of the device.
8. Do not use sharp objects come into contact, rub or strike the screen.

## AUX function operation (optional)

Video input jack plug to connect the input video input, audio input plug to connect the input audio input jack.

## T-V functional operation (optional)

When the unit is connected to a plug-in digital TV boxes in the [main interface] touch [T-V] icon to start the digital TV function. See detailed functional user interface, says digital TV operations Bright.

## File Browser function operation

In [all applications] interface touch [File Explorer] icon to enter the file browser interface.

Local: The file browser will automatically navigate to the root directory of the storage.

USB file manager, a variety of file operations, multi-select multiple file view options and more powerful clipboard functions, search function.

 
Library: insert U disk, you can view pictures, music, video playback and other functions.

## Function Operating Instructions

In **[All Applications]** , touch the **[Manual]]** icon to enter the manual operation interface, and then click the icon corresponding to the function to input the description of the function.

## Telephony features

in the **[main interface]** touch **[Phone]** icon to enter the following interface:

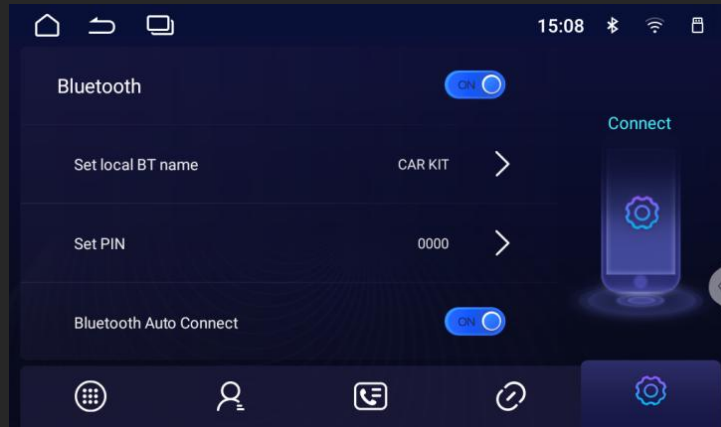

## pair and connect

1. when the phone is paired with the host for the first time, shall look at the steps:

 
Open the phone Bluetooth feature.

2.search by mobile Bluetooth device or search for Bluetooth devices through the host, and connect.

3.is displayed on the phone screen a message, enter the password (0000) on your phone, then press (ENT).

4.After pairing, to enter the following interface: **[Phone]** Bluetooth system after re-energized, it will automatically connect to the last phone disconnected. After successful pairing, the connection state upper right corner **[Bluetooth icon]** is white, otherwise, the connection status **[Bluetooth icon]** must open the phone Let all nearby Bluetooth devices to detect feature,you can search for hosts to mobile devices **[Bluetooth icon]** Call History **[Call History icon]** Phonebook **[Phonebook icon]** dial **[Dial icon]** Bluetooth Settings.

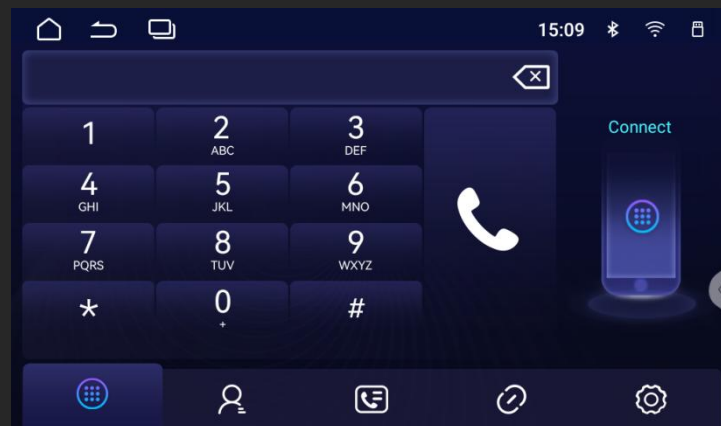

When the phone is connected to the host is successful, enter the phone number via the keypad on the touch screen, then touch **[Call icon]** icon to make a call. In the dial-up process, if input wrong number, touch **[Delete icon]** icon deletes by single digits, press **[Delete All icon]** icon to delete all. The following interface:



When you are in an incoming call, outgoing call or call, the operation instructions are as follows


- ① Touch **[Phonebook icon]** icon to display a numeric keypad, touch again in a call to exit the numeric keypad.
- ② Touch **[Call icon]** icon to hang up the phone.
- ③ Touch **[Speakerphone icon] / [Mobile Phone icon]** icon audio call to switch to the handset with the car stereo unit.




③ Touch [  /  ] icon audio call to switch to the handset with the car stereo unit. You can also hang up directly from your phone.

### Phonebook

 
Touch Bluetooth interface [  ] icon to enter the phone book as follows interface:

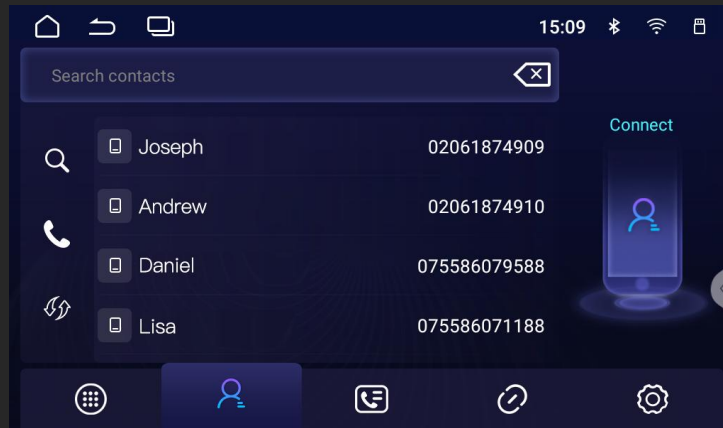

You can search for phone numbers in your phone book through the search bar. Touch [  ] you can sync the contacts as your phone.

### Call History

 
Touch Bluetooth interface [  ] icon to enter the following interface:

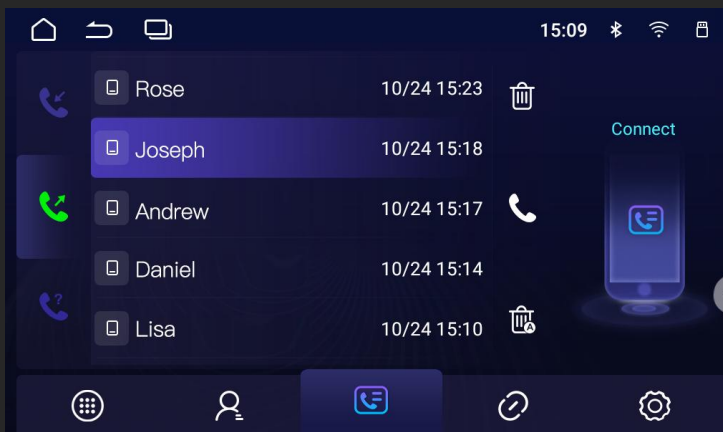


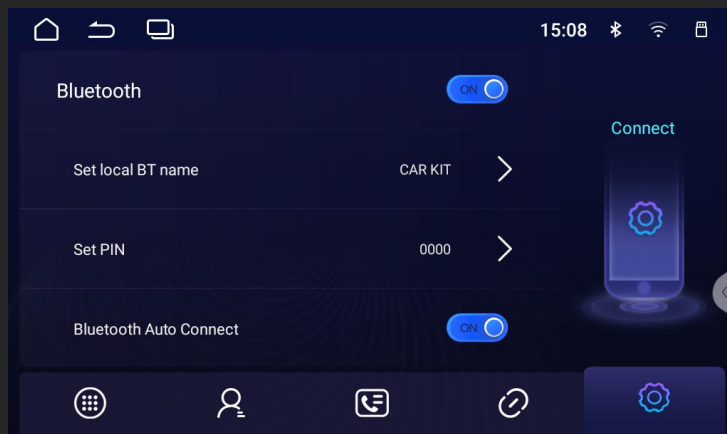 
Touch the bottom right corner [ Call out the phone \ Answer the phone \ Missed call ] icon to switch outgoing missed incoming calls display interface.

Note: After the connection is successful, the phone sends a request message ( BC8-Andrroid wish to access your contacts and call history you want to grant access BC8-Andrroid.ask Privileges? ) And press [Enter] on your phone, enter the phone book download, the download is successful, the phone call records and phone book will be displayed in real time to the host call records and phone book.


### Settings

(As part of the host Bluetooth device name is not the same, please Shall prevail in kind).touch Bluetooth interface [  ] icon to enter the following interface:

- 1.Touch [Device Name PIN code] pop-up numeric keypad, you will need to modify the device name PIN code.
2. Touch [  ] icon to set the [Automatic Auto Accept] function switch.



## Navigation operations

In the [main interface] touch [Navigation] icon to enter the navigation interface. By pressing the panel [  ] key to exit the navigation screen, switch to the main screen. After exiting the navigation interface, the background will continue to maintain navigation.

## Before the navigation instructions

1. Make sure that the host and the satellite antenna is connected properly, switched within a period of time, satellite antennas need to receive satellite signals and update the information, you can wait for a while to work this time Screen status bar displays the satellite has registration marks.
2. Make sure that the vehicle is not in the position of the satellite signal receiving bad places, such as tunnel, bridge, next to the tall buildings and the like.
3. driver to be pre-set navigation destination in the parking state, the process of moving Do not operate the navigation.

## Navigation map Description

because of urban construction and the rapid development of road transport, the company will continue to update the navigation map navigation map, please keep abreast of updated navigation map information is updated, if found to navigation Map of route guidance with actual road conditions or traffic control situation is not, according to the actual road conditions, traffic control and traffic rules drive the vehicle.

## Navigation map Description

1. You can find all kinds of search functions based on navigation software needs to reach the destination, set the destination, start planning the path, a navigation.
2. in the driver more familiar area, driving their own choice may be more suitable than driving situation path may be higher than the navigation software navigation planning.

## Error

Satellite signal reception errors under normal circumstances, at about 7 meters, and in some cases, the timely adoption of this software product may still bias automatically corrected, then please note that the driver View Police to be driving the actual road conditions prevail.

Note:

Navigation system environment is complex, it may be due to large external electromagnetic interference caused by operation error, navigation is not working properly (if not into a map, GPS and so no image).Restart GPS can enter normal operation.

## Cleaning equipment

If the surface of the device has a stain, use a clean, soft cloth to remove spots, such as cleaning cloth. If the panel is very powerful dirty, wipe with a mild detergent dirt, then use a clean, soft cloth to wipe off the cleaner. Mechanical parts cleaning spray may affect the device directly on the device. Hard cloth or using a volatile liquid (such as thinner or alcohol) to wipe the surface this may scratch the surface or erase character.

## Radio operation

In the [main interface] touch [Radio] icon to enter the radio interface:



## Band switching

Touch [BAND] icon to switch between FM AM.

## Fine-tune search

 
Press [◀] and [▶] icon trimming point by point, long press the manual search, when the search to the radio will automatically stop.

## Automatic search storage radio stations


① Long press [🔍] again icon to automatically enter the search state to search stations automatically stored. Touch the search process [🔍] icon to terminate the automatic search for a station.

## Radio list

Press [☰] icon to to enter the following interface:

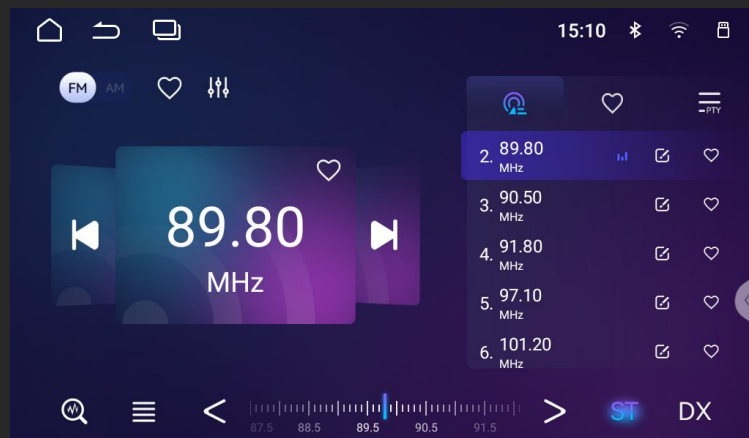

1. Local List contains the radio stations you searched, Favorites List contains the radio stations you like.


2. Touch [  ] icon, you can bookmark or uncollect the radio stations you like before.

3. Search, search again after the search will stop automatically.

## Bluetooth music function

 
Bluetooth music function, namely through the audio device to play wireless music files in your phone, provided that this mobile phone must be able to support the corresponding Bluetooth protocol.

When the Bluetooth device is connected to the machine After the audio system automatically connect to a paired phone. In the [main interface] Touch [BtMusic] icon to enter the following interface:

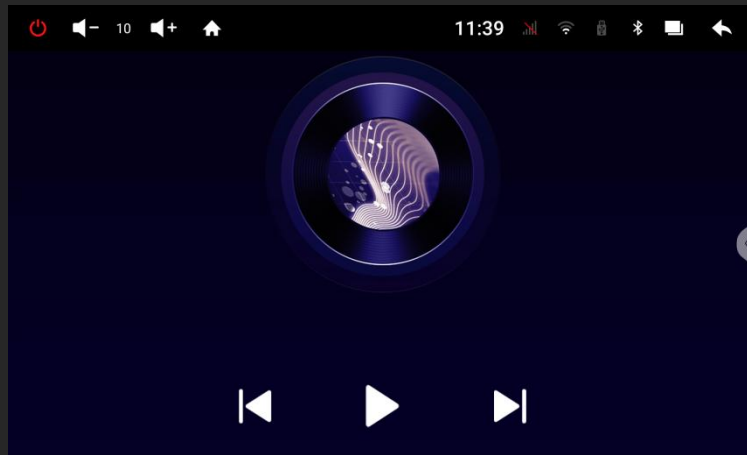

## CAMERA functional operation

 When the unit is connected to CAMERA video input, [all applications] interface touch [CAMERA] icon to enter the following interface:

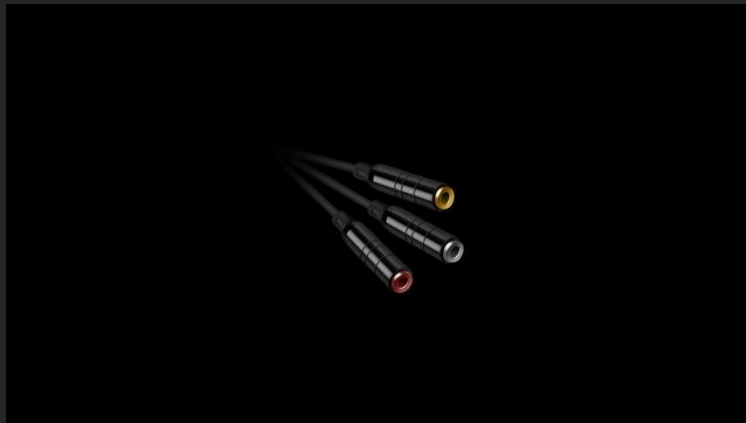

1. When the car engine is not connected with the equipment, in CAMERA screen keep the display content of the above page.

2. When the device is connected with the car engine in the CAMERA screen displays load, the normal display front camera screen after loading.








Native CAMERA video input display function only, not with CAMERA serial communication control device functions.

Please refer to the physical panels, inquiries about the corresponding key introduction. (Part Function Keys If deviation, please

prevail in kind)

## (Switch Mute)

In the absence of state power, short press to start the host.

1. with panel [  ] key case, according to this side of [  ] key is no mute function in the boot state, long press the side of the [  ] key is off the host, press the panel [  ] key to switch to silent mode.
2. no panel [  ] down key scene in the boot mode, press the panel [  ] key to switch to silent mode, press [  ] key to turn off the host.


## (Main Menu)

 In any application, press to return to the main screen.


## (Back Key)

 In any application, press to return to the previous menu.

## (Volume Up)

 
 In any mode, press the volume up.





## (Volume Reduction)

 In any mode, press volume down.
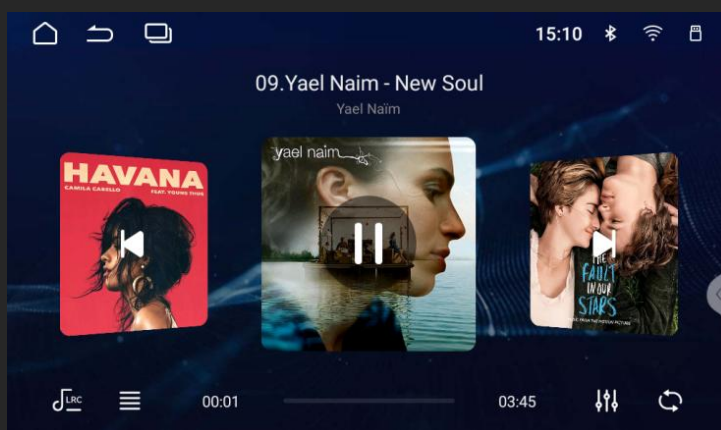
## Music functional operation

1. This function can play USB, built-in hard disk connected device audio files.
2. The product supports music file formats including MP3, M4A, WAV, AMR, WMA, OGG, AAC, MID and so on.
3. does not support music playback, may be prompted to format does not support can not be played.
4. in the [main interface] touch [music] icon to enter the following interface:




5. Touch [  ] and [  ] icon to perform the song next song played.
6. Touch [  ] icon to switch between pause play.
7. Touch [  ] icon to switch between open loop repeat a single in a repeat all random.


## Figure browsing operation

 This function can be USB, internal hard disk connected to your device for viewing image.

- 1.The product supports image file formats including JPG, PNG, BMP, JPEG and the like
2. Unsupported image format player, because the format is not supported and can not be played.
3. in [all applications] interface touch [image] icon to enter the following interface:

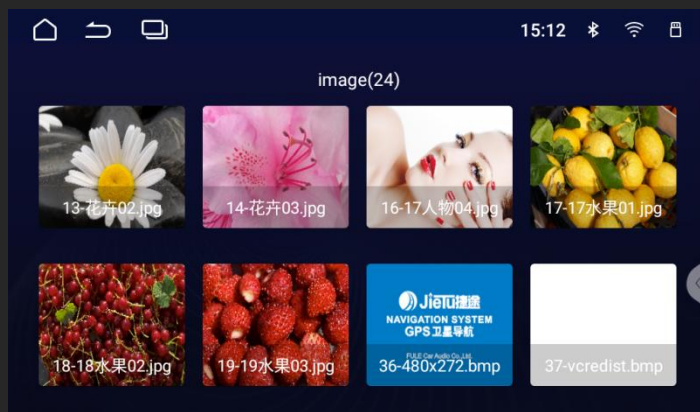

 
touch any of these picture in the lamination Grid List to enter the picture preview interface as follows:

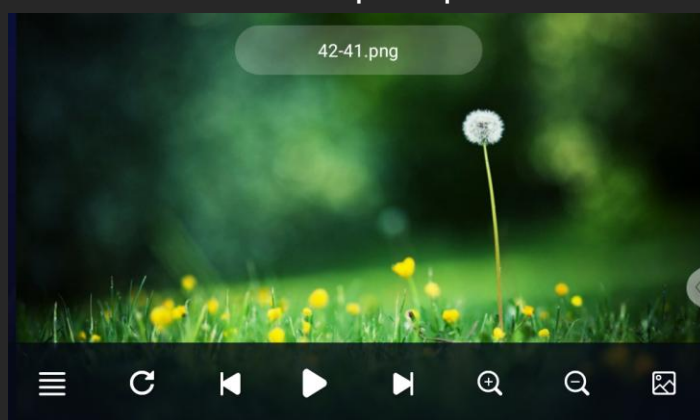

- 5.Touch [▶] icon to turn next picture, and touch [◀] icon to turn previous picture.
6. Touch [↺] icon to set the picture Rotate Left.
7. Touch [⊕] icon to zoom the picture and touch [⊖] to zoom out the picture.
8. Touch [▶] icon to automatically browse the pictures every 5 seconds.
9. Touch [🖼️] icon to set the current picture as wallpaper.

## SET FUNCTION OPERATION

 
In [all applications] interface touch [Settings] icon to enter the following interface:

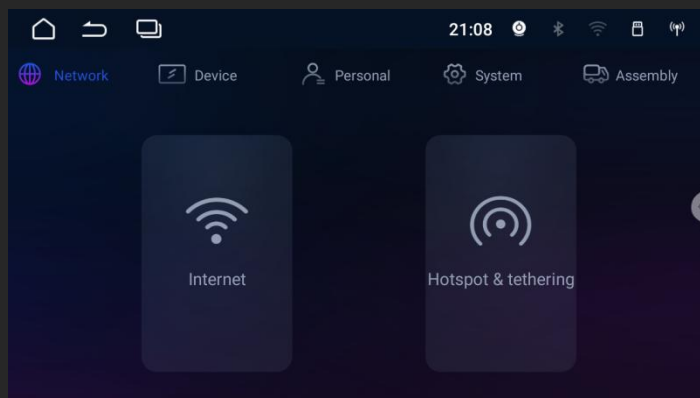


### Internet Settings

#### 1.Opening and closing Internet

 Touch **[Internet]** to enter the following interface:

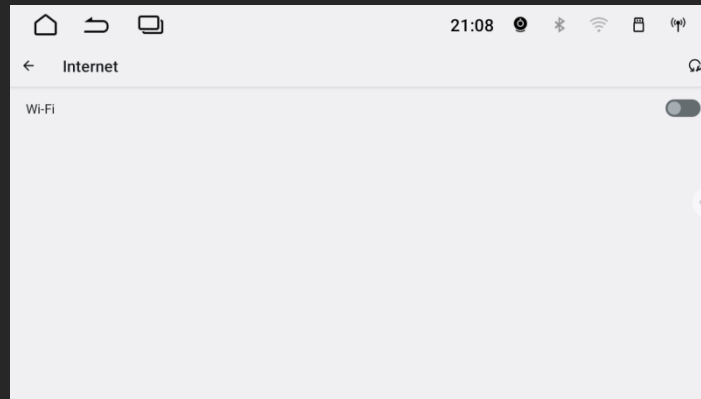

 Then touch the button **[  ]** to open the Wi-Fi. WLAN open later, if you are surrounded by WLAN network in the list on the right column will be searched. The following interface:

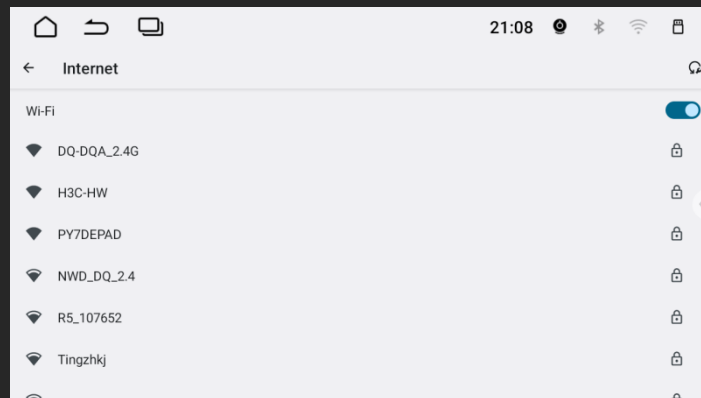

The figure above, to search for the source name (on the router, this name is called the SSID, they can be set, is generally not recommended set to Chinese) small print below plus wireless WLAN Tight manner, each SSID behind the fan icon indicates the WLAN signal strength, if the fan next to the graphic added a small lock indicating signal is encrypted, you need to enter a password before they can connect.

#### Connectivity Wireless WLAN

Search to wireless WLAN if not encrypted, it will automatically connect after open WLAN.

If there is encryption, click on the wireless WLAN name, a password will automatically pop up a window, generally only need to enter your password and click on the bottom right of the Connect button to connect.

Check the lower-left corner of the Show advanced options later, there will be more detailed settings, when connecting this function can be selected according to their needs:

**Proxy:** Default None (no access to general, will not be here, say so).

 
**IP settings:** The default is DHCP, automatically obtain IP address. When elected as static, you can manually enter the IP address.

**Data usage**

Can query traffic usage and other functions.

## 2. Hotspots and network sharing


**Hotspot and Network Sharing:** Click on 'Hotspot and Network Sharing' to display the following interface:

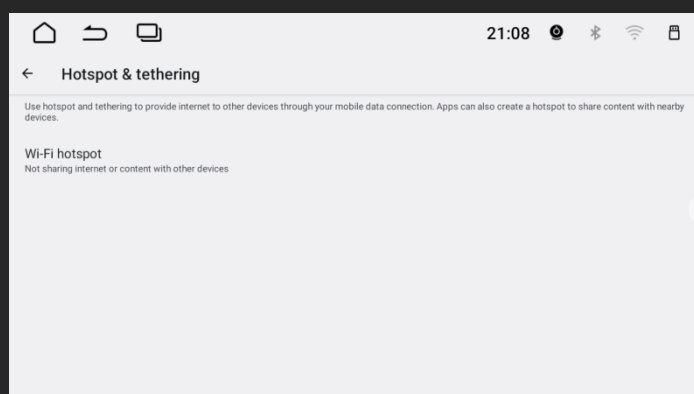

To modify the Hotspot name, security password, touch **【 Wi-Fi hotspot 】** to open Wi-Fi hotspot.  
Wi-Fi hotspot: can be set to enable data network, mobile data network roaming capabilities and other options.

## Sevices settings

 
Touch **【devices setting】** icon to enter the following interface:

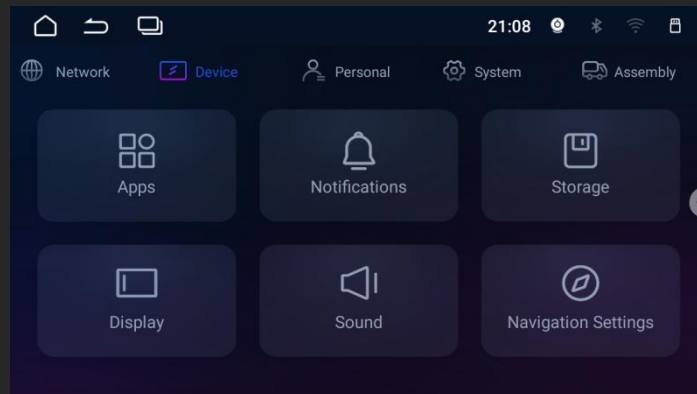

You can view the historical usage records of the functions in the list in the notification function, view the device memory usage in the storage function, and set navigation settings

### 1. Application

 
Settings page in touch **【Application】** icon to enter the following interface:

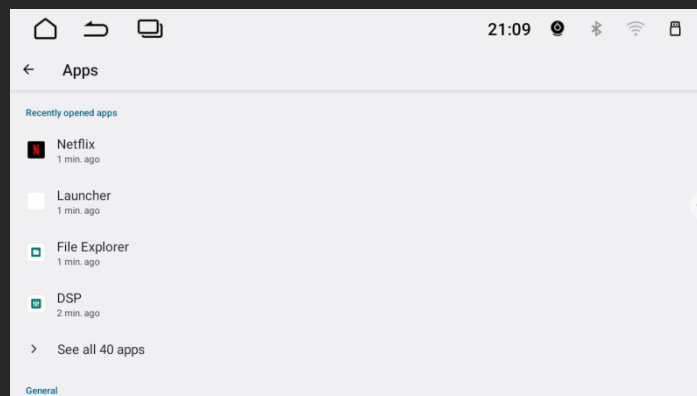

You can set permission management settings for the app in the list

### 2. Display

 Settings page in touch **【Display】** icon to enter the following interface:

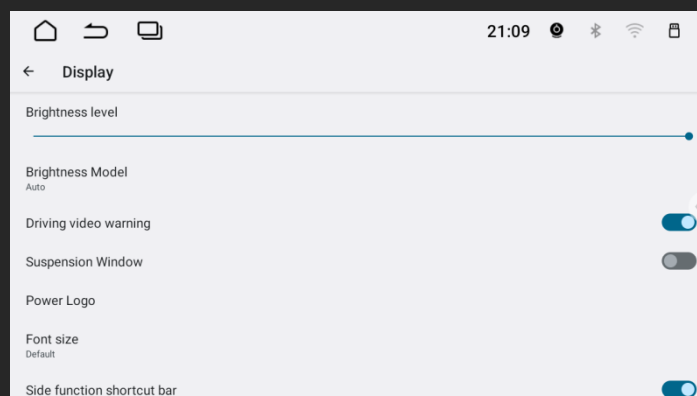

1. Drag the **【 —|— 】** icon under **【Brightness level】** , the effect can be adjusted backlight settings.
2. Touch **【Brightness Model】**icon to enter Brightness Model Setting. You can choose one of the three defaults: Auto, Day, and Night. In the Auto mode, the brightness follows the changes of the headlight or the power switch. Day mode will adjust the brightness to high brightness, and Night mode will adjust the brightness down
3. Touch **【Power Logo】** icon to enter Power Logo settings, dynamic power logo and static power logo can be selected in the



entered page.

4. Click on the **[Driving Video Warning]** switch to set whether video related functions can be watched while driving  
For your driving safety, please do not set it to be able to watch videos

### 3. Sound

Settings page in touch **[Sound]** icon to enter the following interface:



1. **[Default Volume]** , **[BT Volume]** , **[Navi Volume]** , **[Mixing ratio]** can be adjusted by dragging the corresponding **[ —●— ]** icon. **[Default Volume]** is the default volume when the device is turned on, and **[BT Volume]** is the default volume when the Bluetooth is in the incoming call, removal or conversation. **[Navi Volume]** refers to the size of the navigation broadcast sound, and the **Mixing ratio** refers to the ratio of the output size of other sounds when the navigation sound is broadcast.

2. **[Beep]** and **[Mute Back car]** can be set by touching the corresponding **[  ]** button. **[Beep]** refers to the button sound switch, **[Mute Back car]** is whether to mute the car when it is backing. If the reverse mute is turned off, you can set the level of sound attenuation through **[Back Car Volume Reduction]** .

 
For the individual needs of the driver or passengers, if the current volume is adjusted to be lower than the default volume, the volume will remain at the volume set last time and restart after acc off.

### 4. Navigation settings

The navigation path has been set at the factory. Please do not enter the navigation interface and change the path arbitrarily. Otherwise, it may cause program exceptions

## Personal Settings

Click on **[Personal Settings]** to enter the following interface:

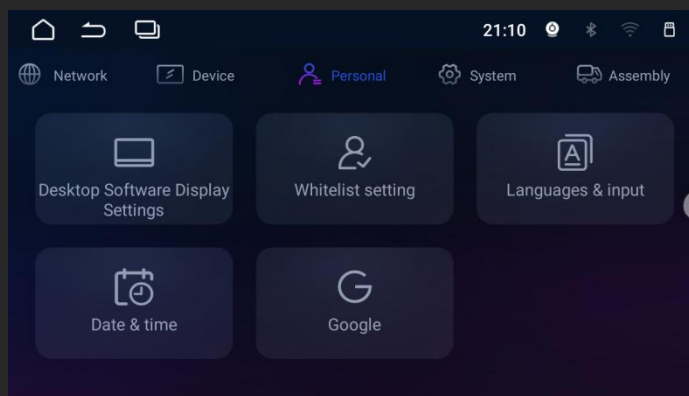


### 1. Desktop software display settings

Click on **[Desktop Software Display Settings]** on the page to set the functions displayed in the desktop window .

### 2. Language and Input Methods

 
Touch **[Language]** icon to enter the following interface:

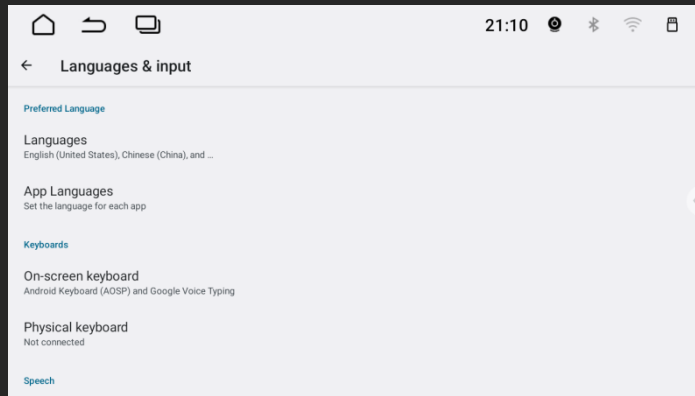

You can click on the desired language in the list to set the language.

### 3. Date and time Settings

 
Touch **[Sound]** icon in the **[Date and time settings]** to enter the following interface:

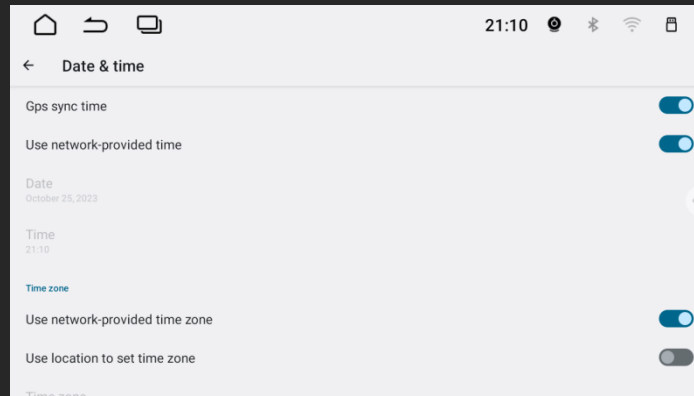

You need to set the date, time, and time zone, and successfully set them in the corresponding interface of the touch **[OK]** icon.

## System Settings

 Click on **[System settings]** to enter the following interface:

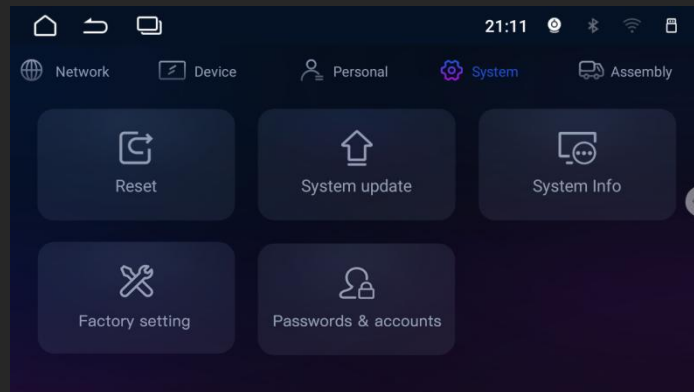

You can perform system upgrades, view system version information, and manage user passwords and accounts in the system settings.


### 1. Restore to factory

 In the **[Car settings]** screen, touch **[Reset]** icon, A prompt dialog **[Determine the factory reset]**

will pop up and if you touch the **[OK]** icon to restore the system to factory settings. The system will automatically restart. After the system is restored to factory settings and all third-party programs are cleared and installed, user data will be lost.


### 2. Toolbox function operation

Click on the toolbox to see the following interface:

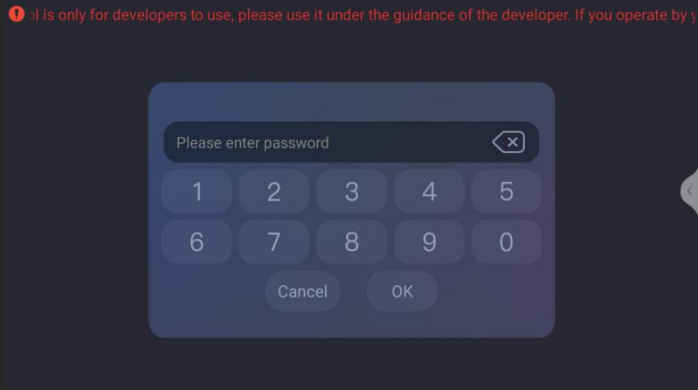


### 3. Toolbox function operation

 Click on **[Factory Settings]** and you will see the following interface

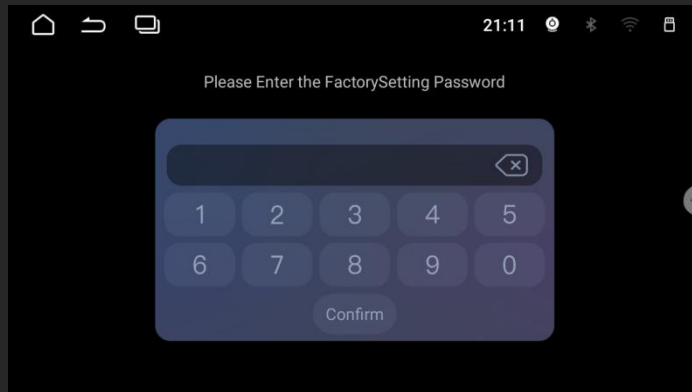


## Loading Settings

 Click on **[Loading Settings]** to enter the following interface:

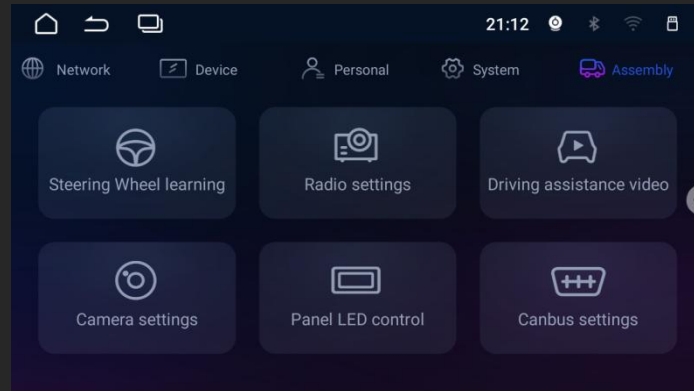

### 1. Steering wheel learning

 Through the original steering wheel, the machine can also be controlled. The positive electrode of the original steering wheel control wire is connected to the positive side and negative electrode of the machine control wire. Press the keys above the steering wheel in sequence, record the order, and click on the corresponding function settings to save the settings

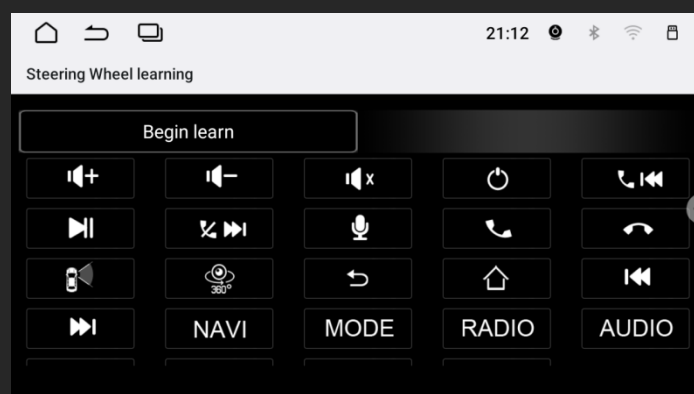


## 2. Radio area

You can correctly select the radio region of the country you are currently in.

## 3. Driving assistance imaging

 
Click on **[Driving assistance imaging]** and you will see the following interface

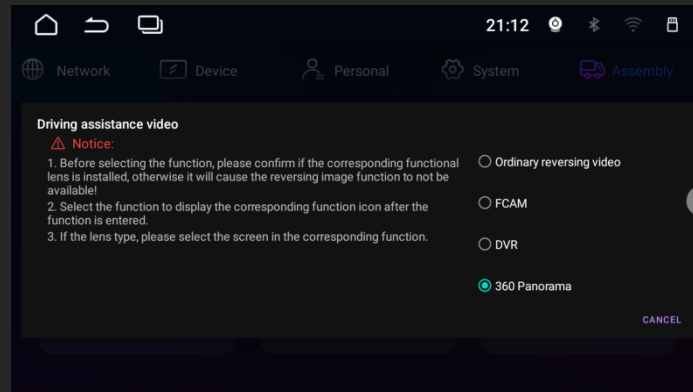

You can choose from this page: regular reverse image, front view reverse image, front and rear high-definition dual recording image, high-definition 360 ° panoramic image. After selection, restart to take effect.

## 4. Lens settings

 
Click on **[Lens settings]** and you will see the following interface

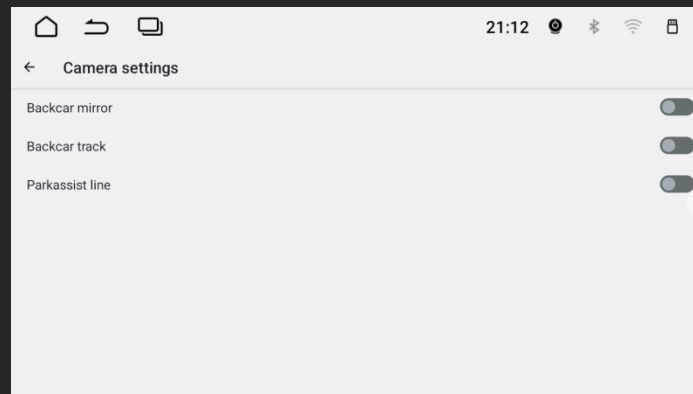

- ① Click on the **[reverse mirror]** switch and set the reverse mirror switch to adapt to different styles of reverse cameras.
- ② Click on the **[Reverse trajectory]** switch to set whether the reverse trajectory line is displayed when reversing.
- ③ Click on the **[Parking Aid Line]** switch to set whether the parking aid line is displayed when reversing.

## 5. Panel light control

 Click on **[Panel light control]** and you will see the following interface

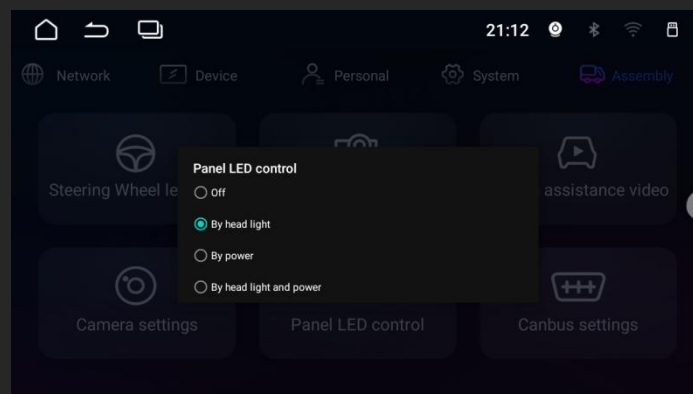

You can choose from four different control methods for panel lights: off, follow headlights, follow light source, follow headlights, and power supply

## DVR


High-definition double recording streaming media function, is connected in front of the car and the car after two high-definition Ahd Camera, through the connection line directly connected to the host, the realization of forward and backward simultaneously video recording function, without external conversion, Ahd signal directly connected to the host, no loss, high Fidelity, in the host screen can be super-clear synchronous display camera screen, ultra-low delay


1.on the home screen or the APP screen, click the [DVR ] icon to access the APP screen, which is called "double record" for short


2.dual screen preview: the first entry into the dual-record interface is a front-and rear-view screen display, with the top half forward and the bottom half rear, in order to preview the full camera image in real time, when the front and rear screens are displayed together, the picture is shown compressed in half;


3.single screen preview: Double Click on the front and back view image area, you can switch to single screen mode, full screen image display;

4.video control: The product, forward and backward video is to support separate control, in the single screen preview interface, video control button will be displayed, divided into video switch, lock switch, camera button, camera switch switch;

>  Recording switch: When the storage device is inserted, set up a good storage path, click the Recording switch, can start recording and stop recording;

>  Lock switch: Support Manual Click Lock, click to open lock, lock switch is lit, at this time recorded video file, will be locked save, when the storage disk is full, will not be automatically overwritten, after recording, automatically restore unlock on the load, to avoid storage disk space is used up, resulting in normal video recording; if you want to continue locking, you can repeat this operation;

>  Photo switch: Click on the photo, there will be a photo tip, the current picture will be saved as a picture, can be repeated operation

>  Camera switching: Click on the button, you can achieve the forward and backward view of the image switch

5.double recording settings: in the front and back dual display screen, the bottom Below the single screen preview the [ settings ] icon, click to enter the settings interface, divided into the following parts: & Gt; playback, Click on the [ playback ] icon, enter the playback screen, the right side of the display has a variety of categories:

◇  Forward Video: is a recorded forward video camera image file, is arranged according to the time sequence;

◇  BACKWARD VIDEO: The list of video files recorded by the camera according to the sequence of recording time;

◇  PHOTO: Photo File List, Click to play the photo;

### >Recording settings

◇ Video storage location: When you select the video storage path and insert the storage device, the optional list will prompt the device to detect. When you select the storage path, the device can only be used as a video, in music and video players, does not display the contents of the device;

◇ SINGLE RECORDING TIME: circular recording, single video recording time setting selection;

◇ Automatic video switch: When the switch is turned on, the recording will start automatically. When the switch is turned off, the last recording state will be remembered


◇ FORMAT: After the choice of good storage disk, in order to more smoothly video storage, Storage Disk format is needed;

### >Display Settings

◇ Start-up display streaming media time: select the time, the boot will automatically show the double-record screen, view the status of the car before and after the time, and then automatically exit;

Note: If the DVR function is not found in the application, please proceed as follows: click on Settings → Loading Settings → Driving Assistance Video → Front and Rear HD Dual Recording Video → click on Restart.

## Projection screen

1. Touch [  ] icon to put the main screen application into the secondary screen, and click the projection icon again to pull the sub screen application back to the main screen.
2. HDMI projection will output the sound to the sub screen, CVBS sound is still output at the host side.

## Common Troubleshooting Guide

**Fault 1: You can not boot**

**Cause: The power supply fuse burned**

**Solution: Replace the same type fuse**

**Fault 2: can not boot**

**Reason: Other factors contributing to the microprocessor is not working**

**Workaround: After 10S, host restarts**

**Fault 3: After the ignition switch is turned off, the settings are lost**

**Reason: replace the battery or fuse**

**Solution: Re-setting information and save the**

**Fault 4: poor income units**

**Reason: The radio signal is weak**

**Solution: The car is moved to another location search again**

**fault 5: No image**

**Reason: Other factors contributing to the microprocessor is not working**

**Workaround: After 10S, host restarts**

**Fault 6: driving the process can not view the image**

**Cause: driving the process is not allowed to view images**

**Solution: Plug the car to a safe location, the car stalls placed in the P range, pull handbrake**